

# Simple Remote Controller User Guide [MSZ-FH series]

The remote controller has a simple, stylish design with emphasis on the use of straight lines. The unit can be turned on/off and the temperature adjusted with the cover closed.



## A SELECTING OPERATION MODES

- Press **ON/OFF** to start the operation.
- Press **MODE** to select operation mode. Each press changes mode in the following order:
- Press **TEMP** or **TEMP** to set the temperature. Each press raises or lowers the temperature by 1°C.

## B CONVENIENT ONE-TOUCH FUNCTIONS

 
Press these buttons to toggle these functions on/off.

- ECONO COOL**  
A swing pattern is used for airflow to create an enhanced cooling sensation. This allows the temperature to be set 2°C higher without any loss of comfort.
- POWERFUL**  
Air conditioner operates at maximum capacity for 15 minutes.
- i-save**  
Setting preferences can be saved and then activated in future uses simply by pressing the i-save button.  
In normal heating mode, the lowest possible temperature setting is 16°C, but using i-save, this value can be set as low as 10°C.

**Note:** In the case of systems with multiple units (multi-systems), it is not possible to set different operation modes for each unit. In addition, in some cases, it may not be possible to use certain functions.

## PREPARATION BEFORE OPERATION (SETTING CURRENT TIME)


- Press **CLOCK** button.
- Press the **TIME** button to set the time.
- Press the **DAY** button to set the day.
- Press **CLOCK** again.

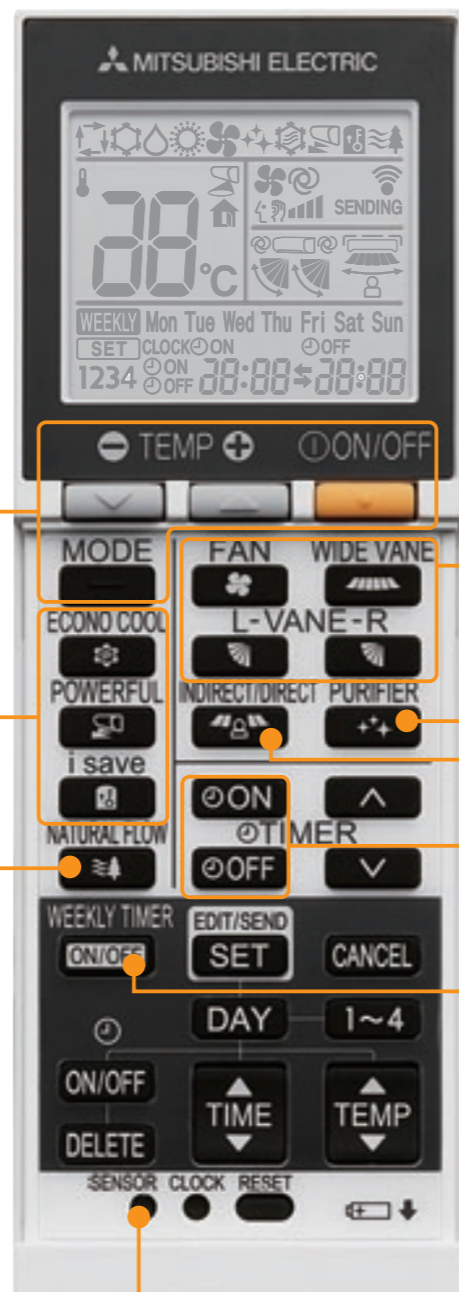

## C FAN SPEED AND AIRFLOW DIRECTION ADJUSTMENT


### FAN

 Press **FAN** to select fan speed. Each press changes fan speed in the following order:




### WIDE VANE

 Press **WIDE VANE** to select horizontal airflow direction. Each press changes airflow direction in the following order:



### L-VANE-R

 Press **L-VANE-R** to select airflow direction. Each press changes airflow direction in the following order:



◀ Heating (or Cooling) of two locations using the double vane

## D What is "NATURAL FLOW"?

As time passes, airflow will become more like natural wind. The continuously gentle breeze provides enhanced comfort for occupants.

 
Press this button to toggle the function on/off.



## E What is "Air Purifying"?

The purifier neutralizes bacteria as it passes through the plasma device.

Press this button to toggle the function on/off.

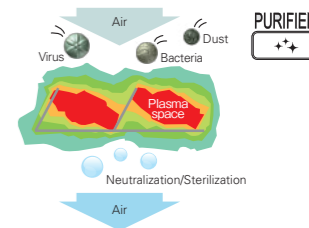

## F TIMER OPERATION

### ON/OFF TIMER

 
- Press **ON** or **OFF** during operation to set the timer.  
**ON** (ON timer): The unit turns ON at the set time.  
**OFF** (OFF timer): The unit turns OFF at the set time.  
 \* **ON** or **OFF** blinks.  
 \* Make sure that the current time and day are set correctly.

- Press **UP** (Increase) and **DOWN** (Decrease) to set the time of timer.  
Each press increases or decreases the set time by 10 minutes.  
• Set the timer while **ON** or **OFF** is blinking.

- Press **ON** or **OFF** again to cancel timer.

### WEEKLY TIMER

- Press **EDIT/SEND SET** to enter the weekly timer setting mode.
- Press **DAY** and **1~4** to select setting day and number.
- Press **ON/OFF**, **TIME**, and **TEMP** to set ON/OFF, time, and temperature.
- Press **EDIT/SEND SET** to complete and transmit the weekly timer setting.
- Press **WEEKLY TIMER ON/OFF** to turn the weekly timer ON. (**WEEKLY** lights.)  
\* When the weekly timer is ON, the day of the week whose timer setting is complete, will light.  
Press **WEEKLY TIMER ON/OFF** again to turn the weekly timer OFF. (**WEEKLY** goes out.)

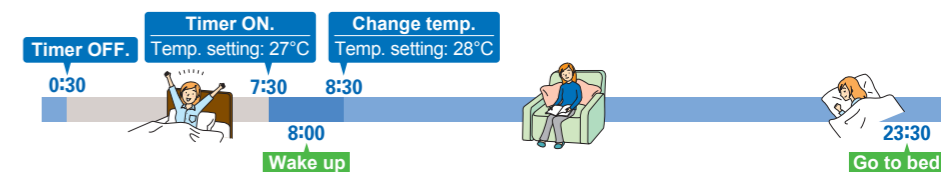

## G i-see OPERATION

### i-see control mode

- Press **SENSOR** during COOL, DRY, HEAT and AUTO mode to activate i-see control mode.  
 • Press gently using a thin instrument.  
 • lights. (Operation display section)  
 • The default setting is "active".

 
 
- Press **SENSOR** again to activate ABSENCE DETECTION.  
 • lights. (Operation display section)

- Press **SENSOR** again to release i-see control mode.




### SENSOR

The sensor detects the floor temperature....

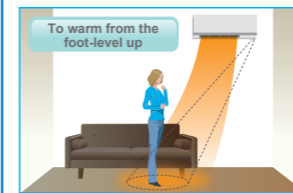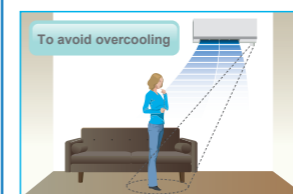

### ABSENCE DETECTION

 When no-one is in the room, the unit automatically switches to energy-saving mode.

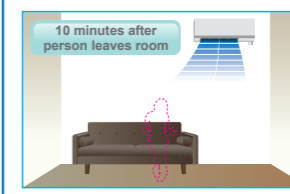


### INDIRECT/DIRECT

Press **INDIRECT/DIRECT** to activate INDIRECT/DIRECT mode. This mode is only available when the i-see control mode is effective.



 The unit monitors people.....

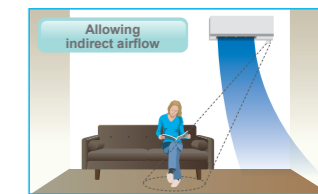

Enhance comfort by averting airflow away from people, or set direct airflow to target people for quick cooling/heating.